

**Information Sheet # 30**  
**The Effect of Power Factor On An Electrical System**

*Your Reliable Guide for  
Generator Maintenance*

**1.0 Introduction:**


Power factor in electrical systems is often referred to but frequently not fully understood.

*This information sheet discusses power factor as regards its explanation and how it relates to generator systems.*

**2.0 Definition of Power Factor:**


In a purely resistive AC circuit, the voltage and current waveforms are in step (or in phase), changing polarity at the same instant in each cycle (see diagram one). Where reactive loads are present, such as with capacitors or inductors (like electric motors, strip heaters, cooking stoves, lamp ballasts, etc.), the energy stored in the loads results in a time difference between the current and voltage waveforms, as the stored energy is not available to do work at the load it is termed apparent power. This is known as a lagging power factor (which is less than 1.0) (Continued over)

Diagram One

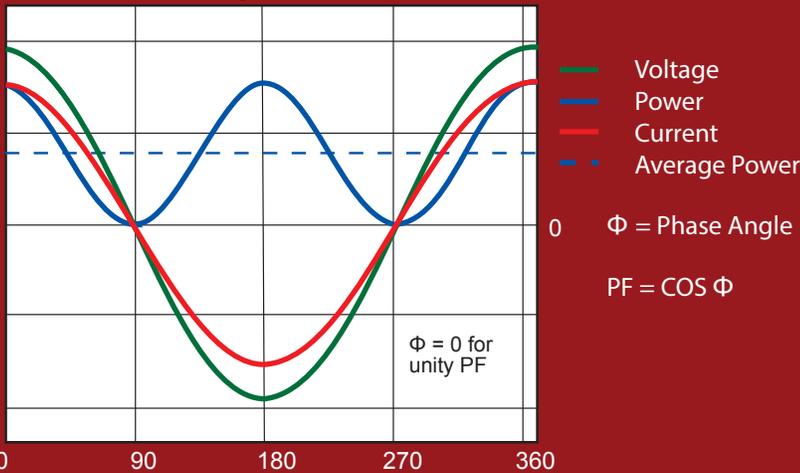


Purely resistive load connected with volts and amps in step for an unity (1) power factor when all the source energy is transferred and available to the load. Good power factors are normally greater than 0.9 to 0.95.

Diagram Two

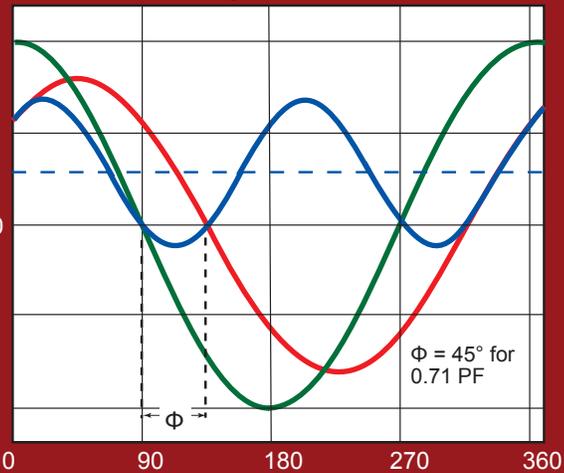

Inductive load connected with current waveform lagging volts. Below unity PF only a percentage of the power is available at the load. i.e 0.8 PF has real power 80% of apparent power. Reactive loads have a percentage of power returned to the source.

Diagram Three

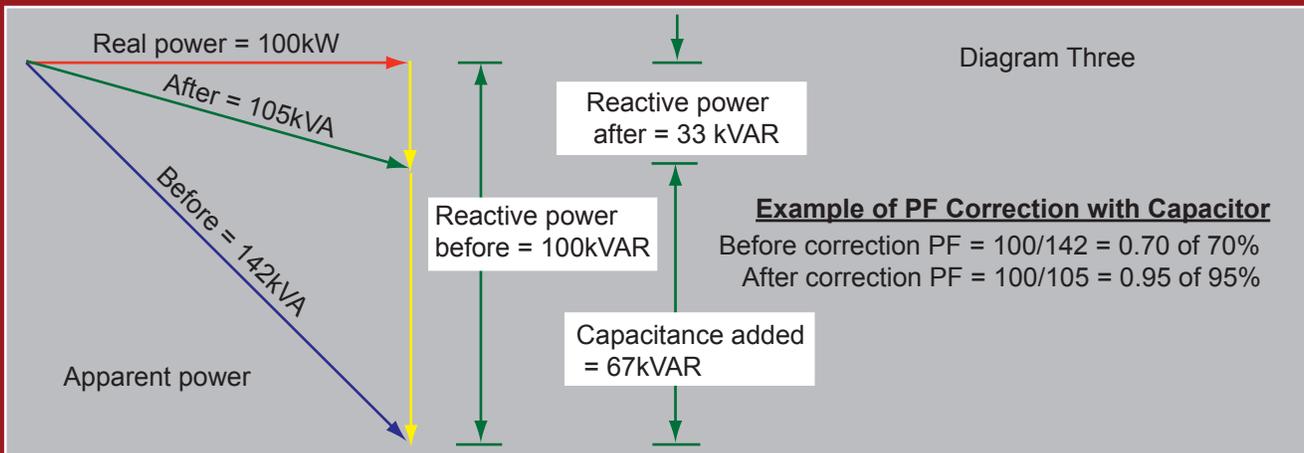

To fulfill our commitment to be the leading supplier in the power generation industry, the Loftin Equipment and Bay City Electric Works teams ensure they are always up-to-date with the current power industry standards as well as industry trends. As a service, our **Information Sheets** are circulated on a regular basis to existing and potential power customers to maintain their awareness of changes and developments in standards, codes and technology within the power industry.

(Continued from previous page)

Power factor, as shown in vector diagram (see diagram two) is the ratio of true power (shown as watts (W) amps x volts) to the apparent power (shown as VA amps x volts) flowing to the load in an alternating current (AC) system. Watts and VA are more commonly quoted in thousands as kW and kVA. kW and kVA in an AC system are only the same when power factor has a value of one (unity). More frequently equipment is designed to have a power factor equal to 0.8.

### 3.0 Difference Between True Power - kW and Apparent Power - kVA and Reactive Power:

In an AC system, such as inductive motors, transformers and solenoids, internal electrical energy is required for magnetization of items such as a motor's field coils. This internal power stored and discharged within an inductive piece of equipment is referred to as reactive power and measured as volts x amps reactive (VAR). Without internal magnetization the AC equipment would not function.

The more reactive power required for magnetization of the internal inductive load, the greater the unusable power and increase in apparent power (kVA) requirements within the electrical system. As shown in diagram one, the greater the value of apparent power (kVA) the lower the power factor and by ratio the lower the real power available, given in kW's.

In layman's terms, power factor has as more to do with the internal inductive loads of AC electrical equipment and the resultant true power kW available. A system designer endeavors to select equipment and design a system that reduces the drop in power factor. A system with a low power factor increases the energy lost in the system and requires a much greater input than can be used effectively to power equipment.

Generator sets are normally rated for power factors between 0.8 and unity.

In summary, apparent power kVA is the power required to serve the equipment's internal reactive load power requirements and true power kW is the power available after reactive power has been satisfied.

### 4.0 Adverse Effects and Why to Avoid Low Power Factor:

A system load with a low power factor will draw more current than a system with a higher power factor A system designer considers the following:

- A Low power factor draws a higher internal current and the excessive heat generated will damage and/or shorten equipment life
- Increased reactive loads can reduce output voltage and damage equipment sensitive to reduced voltage
- Low power factor requires equipment to be constructed heavier to absorb internal energy requirements
- Low power factor will result in a more expensive system with equipment able to absorb internal loads and larger load requirements
- A system designer looks to increase power factor to lower system costs, increase reliability and increase the system's life cycle
- Utilities will charge a higher cost to industrial and commercial clients having a low power factor.

### 5.0 Methods to Increase Power Factor and Load Types:

Electrical system designers endeavor to increase the power factor to as near as 1.0 as possible by incorporating power factor 'corrector' devices within the system. Power factor correction methods adopted depend on whether the load is termed linear or non-linear.

**Linear Load** - These are loads such as induction motors and transformers that can be corrected with the addition of a passive network of capacitors or inductors. Capacitors store electrical power that can be used to excite the internal magnetic fields and reduce the required apparent power kVA. (see diagram three)

**Non- Linear Load** - These loads include equipment that has components such as rectifiers, some form of arc discharge such as fluorescent lamps, electric welders, arc furnaces, etc. This type of load will distort the current drawn into a system. The current in non-linear loads is interrupted by switching devices within the equipment. Switching causes the current to contain frequency components that have multiple power factor frequencies.

For non-linear loads, captive or passive power factor correction can be incorporated to counter the distortion and elevate the power factor.

Power factor correction devices can be installed either at a central substation, spread throughout the distribution system, or built into the power-consuming equipment

**Non Reactive Loads** - These loads are purely resistive such as heater elements and incandescent lights and do not effect power factor.



Greater LA Area Sales and Service Center  
860 Lawson Street  
City of Industry, CA 91748  
Toll Free: 866.938.8200  
Fax: 619.938.8216

San Francisco Area Service Center  
322 Lindbergh Avenue  
Livermore, CA 94551  
Toll Free: 866.938.8200  
Fax: 619.938.8216

Bay City Main Office - San Diego  
13625 Danielson Street  
Poway, CA 92064  
Toll Free: 866.938.8200  
Fax: 619.938.8202

service@bcew.com

www.bcew.com



www.loftinequip.com  
service@loftinequip.com

Corporate Headquarters  
2111 E. Highland Ave. Ste. 255  
Phoenix, AZ 85016  
Phone: (602) 272-9466  
Fx: 602.272.7582  
Toll-Free: 800-437-4376

Parts & Service- Phoenix  
12 N. 45th Ave.  
Phoenix, AZ 85043  
Phone: (602) 272-9466  
Toll-Free: 800-437-4376

San Antonio/Austin  
1241 Universal City Blvd.  
Universal City, TX 78148  
Phone: (210) 881-1623 (San Antonio)  
Phone: (512) 464-1890 (Austin)  
Fax: (210) 881-2143  
Toll-free: 866-441-0375

Dallas/Fort Worth  
5204 Bear Creek Court  
Irving, TX 75061  
Phone: (214) 237-4566  
Fax: (469) 359-60188

Houston  
6113 Brittmoore Rd.  
Houston, TX 77041  
Phone: (281) 310-6858  
Toll-Free: 800-822-3078  
Fax: (281) 310-6865

Las Vegas  
701 N. Green Valley Pkwy. STE 200  
Henderson, NV 89074  
Phone: (702) 399-7595  
Fax: (702) 399-7457